


Connect Wires as shown and peel Red Tape off and stick to the bottom of the table.

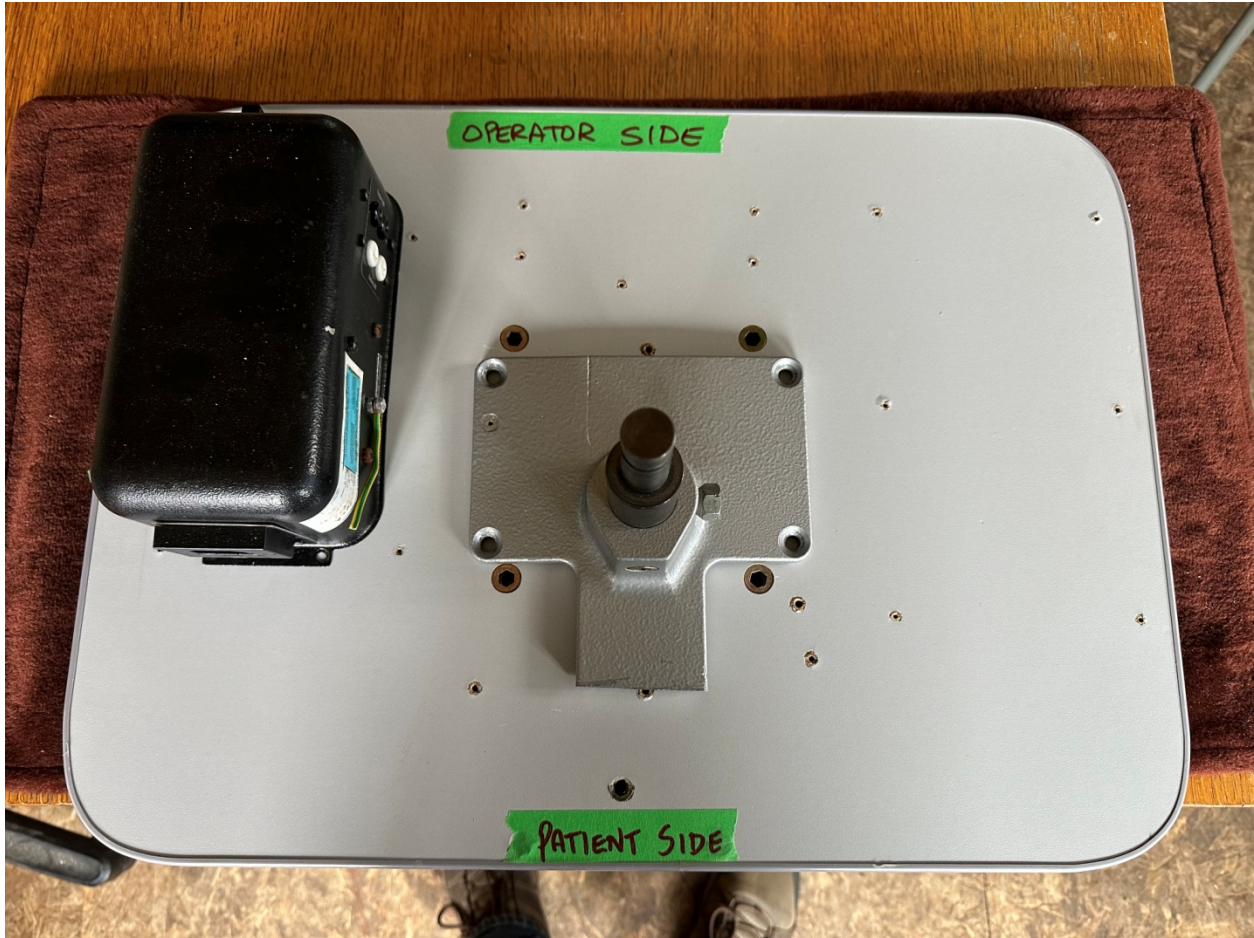

Plug the USB power Bar into the Switch then plug into the outlet on the Stand




Right Handed Setup Before LED Retrofit





Right Handed Setup After Led Retrofit

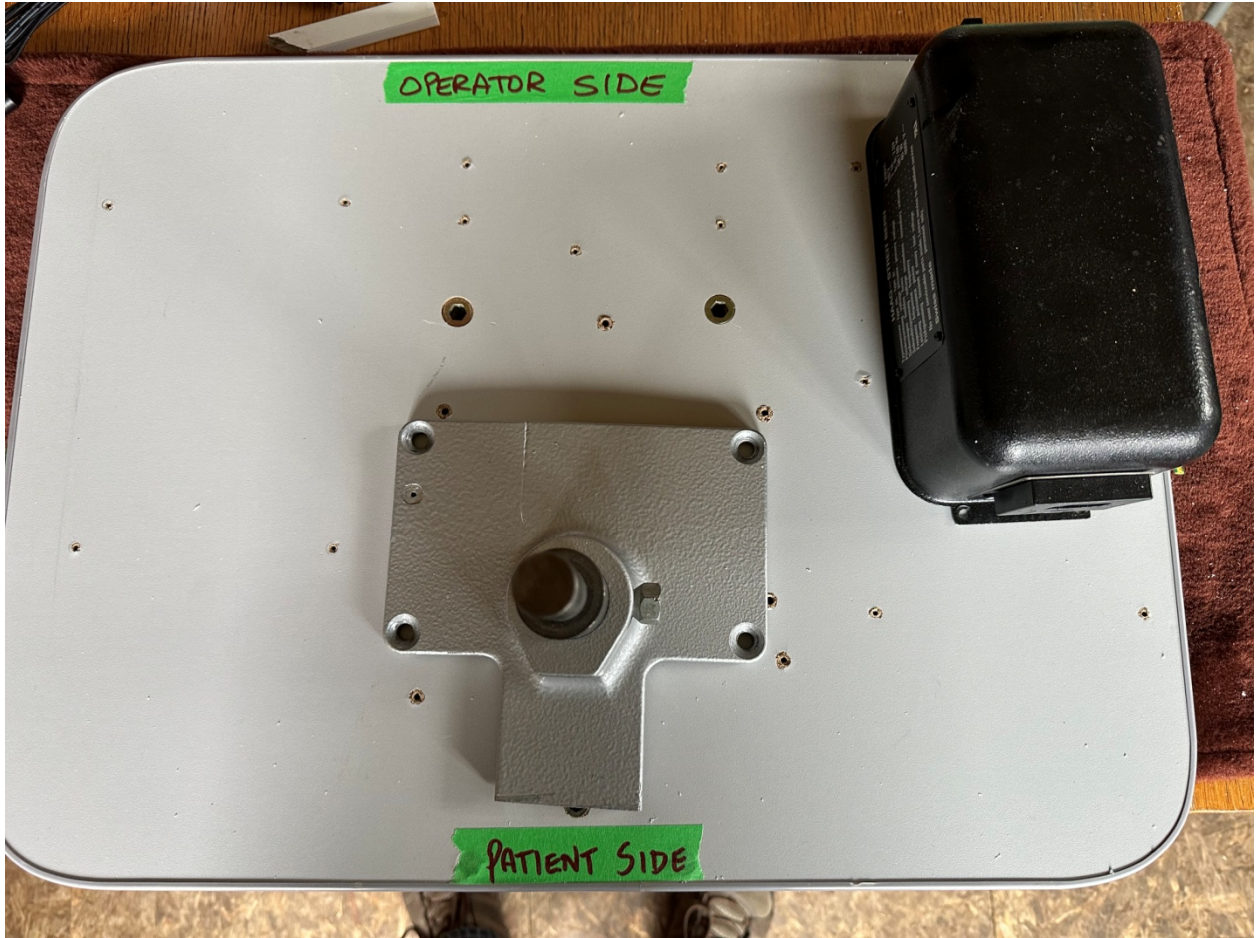

Left Handed Setup Before LED Retrofit





Left Handed Setup After LED Retrofit